
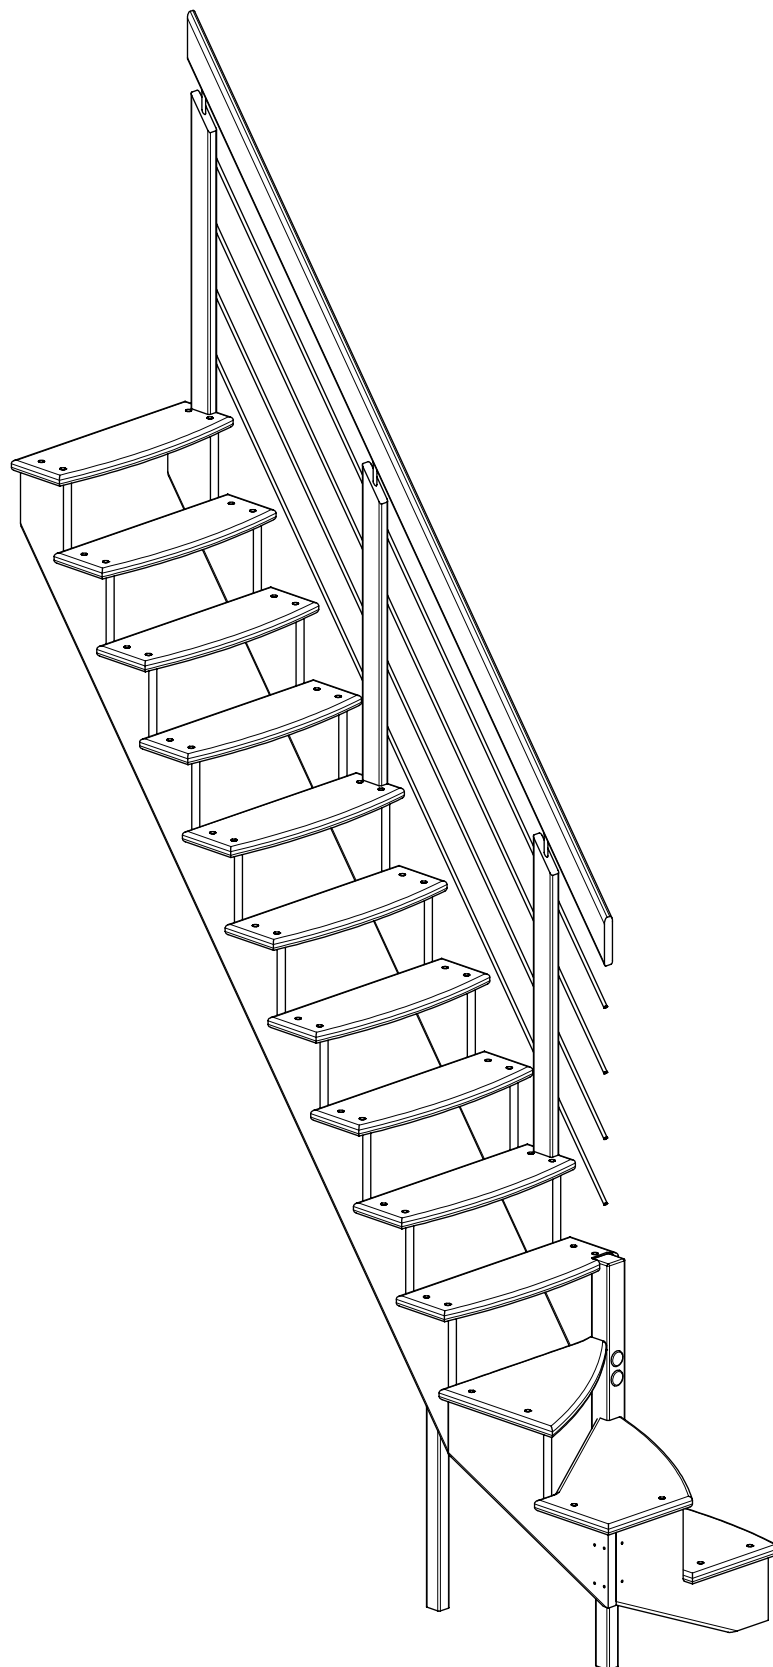
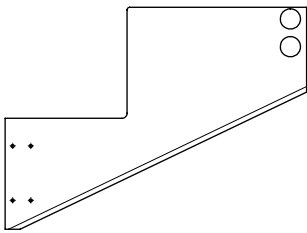
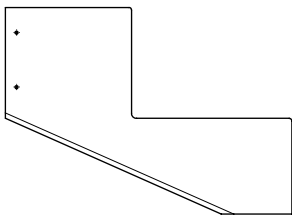

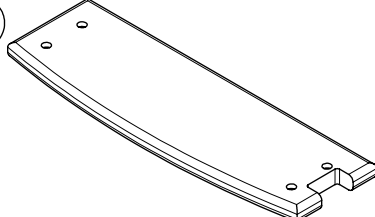

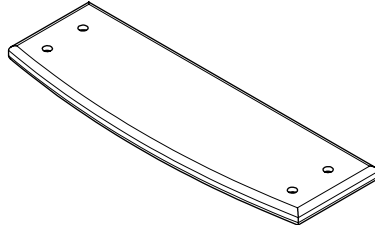
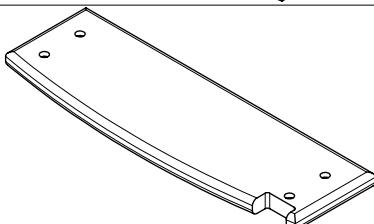

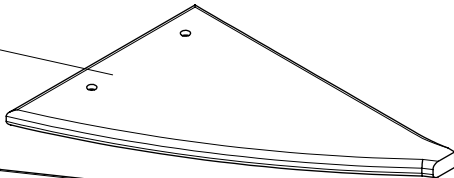
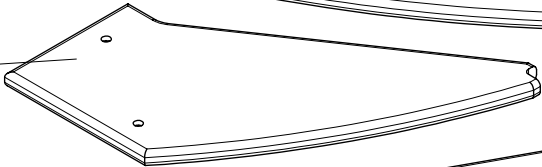

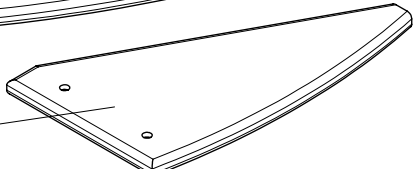




LYON ¼ turn


Installation instruction
Montageanleitung
Instruction de montage






1 																								
x 2 2 																								
x 1 3 																								
x 4 4 					5 					6 					7  Ø 40mm									
x 1 8 					9 					x 1 10 					x 1 16 					x 8 17 				
					x 3 11 					x 3 18  Ø 16mm					x 3 R1-63820									
					x 6 12 					x 46 19  Ø 16mm					x 3 22 									
x 1 13 					x 1 14 					x 3 21  x 4 C1-09910					x 3 23  x 12 K2-46015					x 2 R3-90050				
15 										x 8 24  K1-01010														

30  x 6 R1-63800	31  x 6 R1-63810 Ø8,4	32  x 6 R1-63818 Ø8,4	33  x 2 R1-63808 M8 x 60	34  x 4 R3-91415 Ø8 x 40	35  x 5 R1-63286 Ø6 x 60
36  x 9 R1-63288 Ø6 x 80	37  x 6 R3-72165 Ø6	38  x 2 R1-63807 M8 x 70	39  x 2 R2-85310 Ø8,4 / Ø24	40  x 4 R3-91060 Ø8 x 60	41  x 8 R3-91360 Ø5 x 25
42  x 4 R3-91290 Ø12 x 60	43  x 52 R3-72110 Ø5 x 50	44  x 12 K3-06104 Ø5 x 40	45  x 1 R1-63813 13mm (M8)		

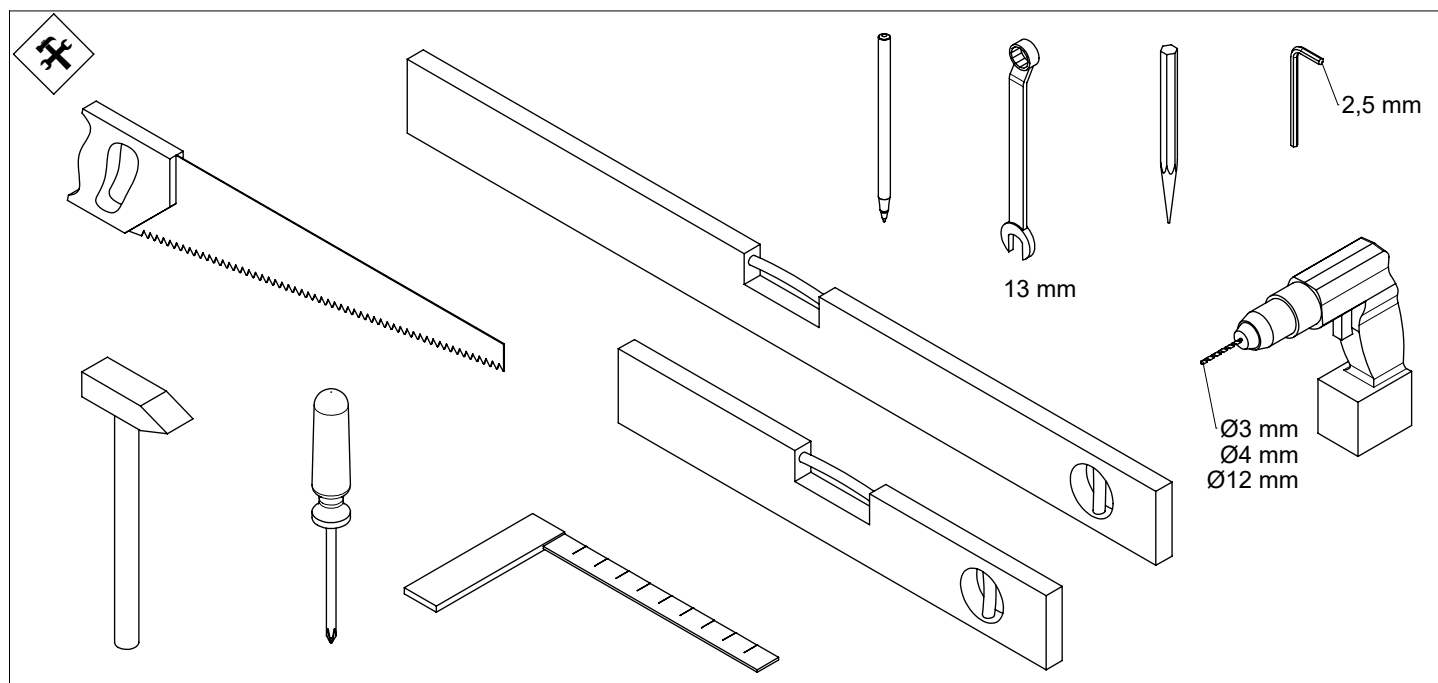


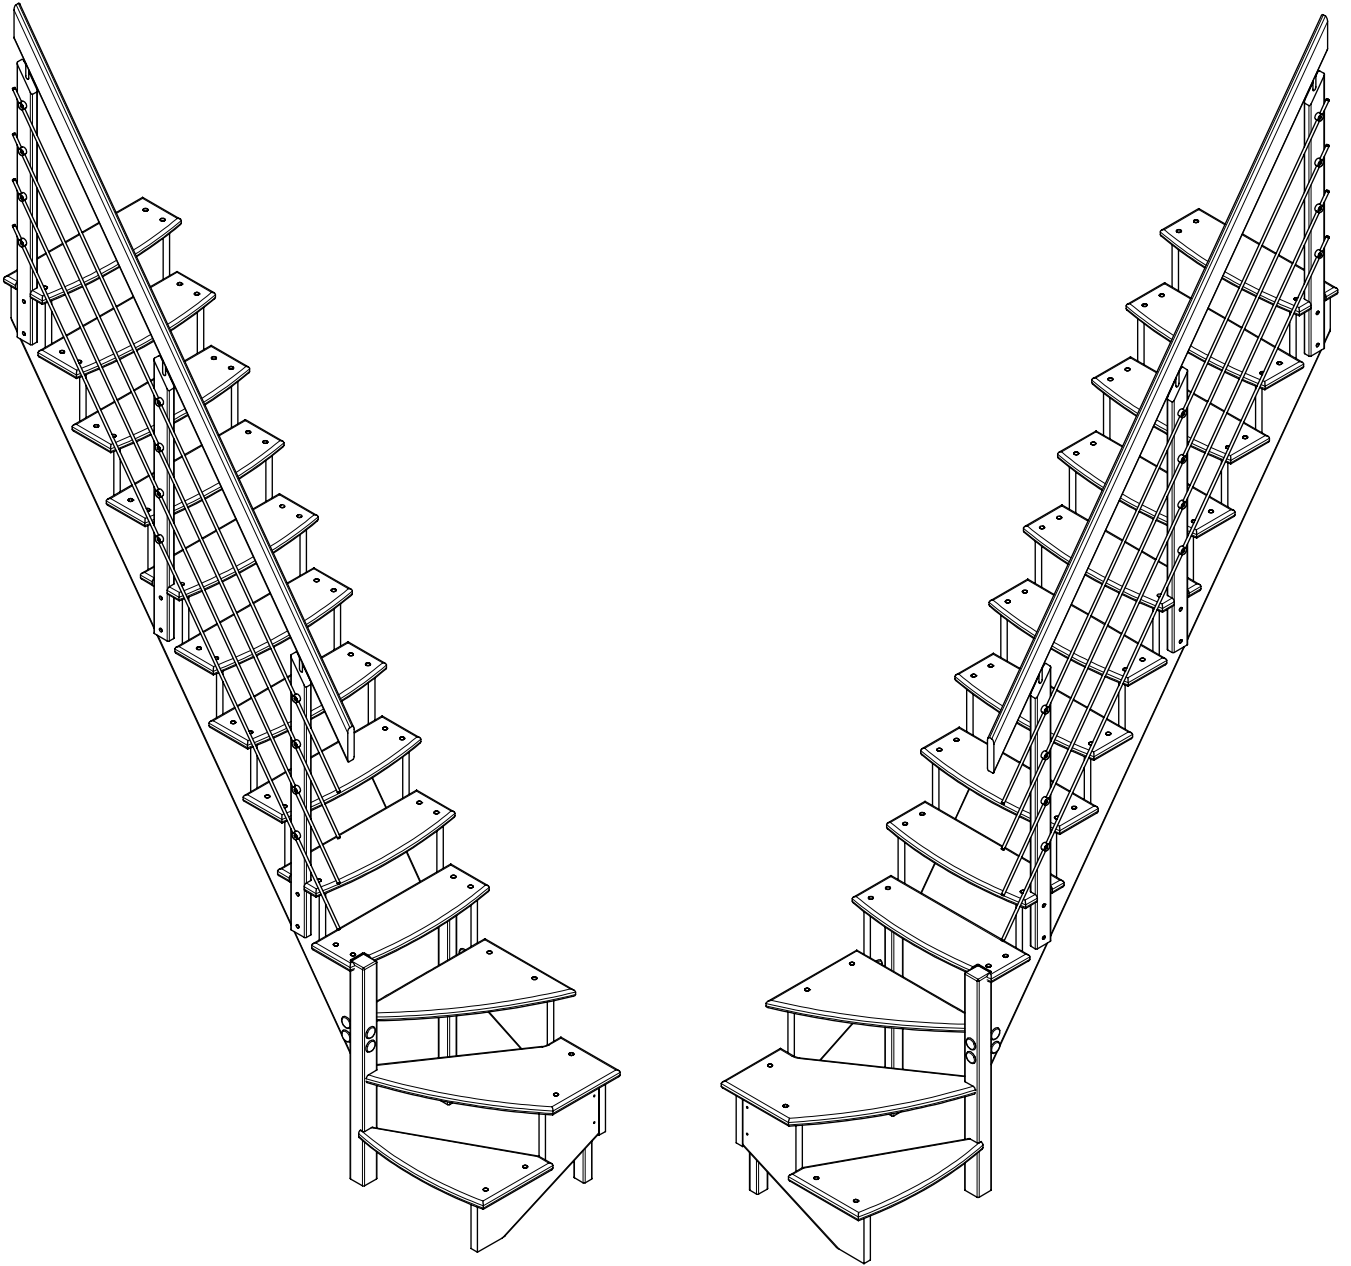


1

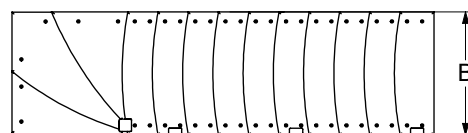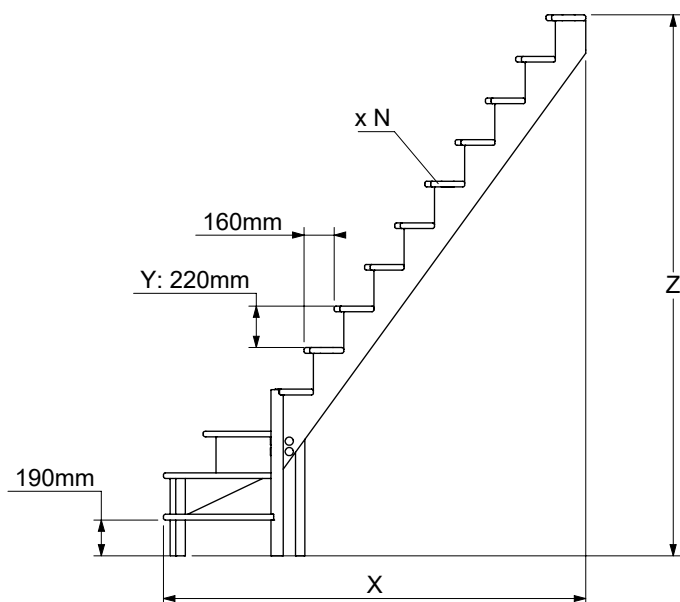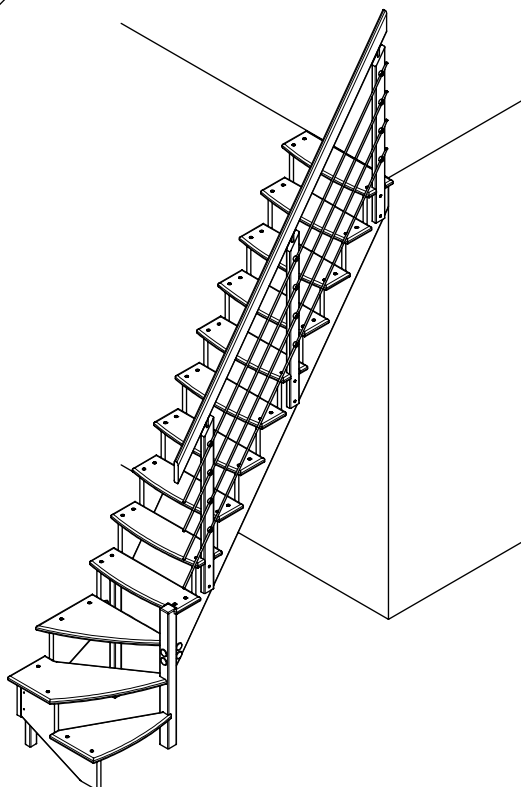


Y: 220mm


N [st / p]	Z [mm]	X [mm]	
		B: 650mm	B: 750mm
11	2420	1913	2013
12	2640	2073	2173
13	2860	2233	2333

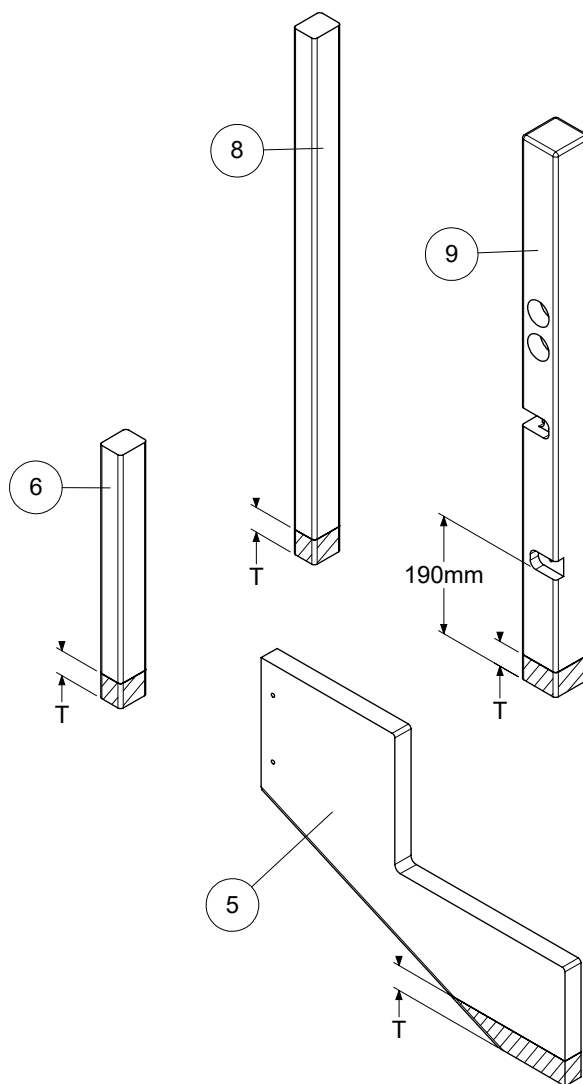
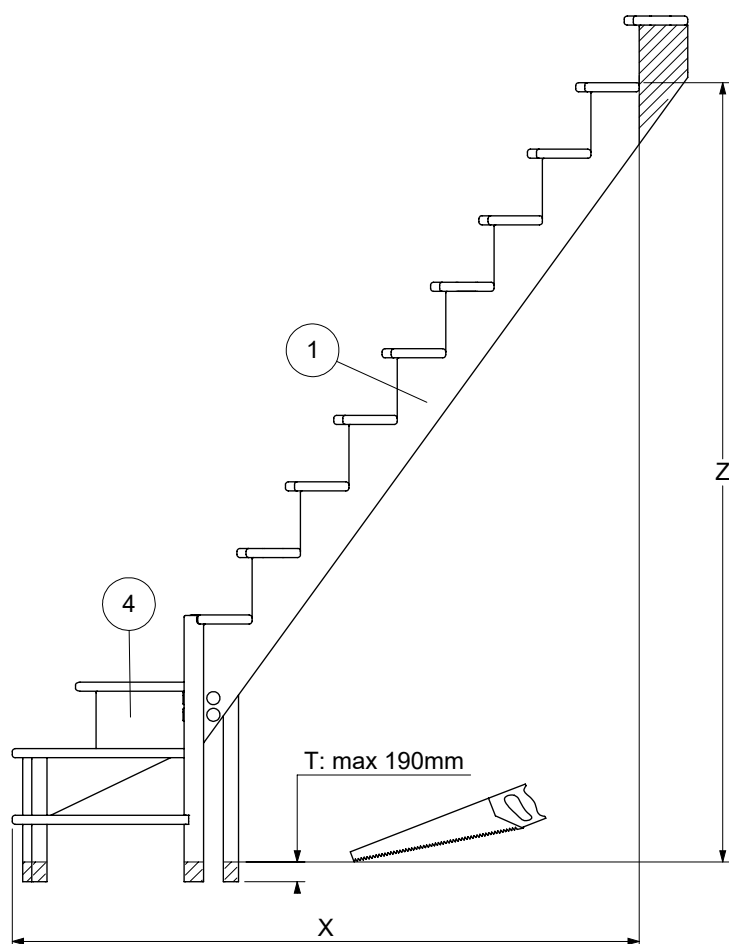




2

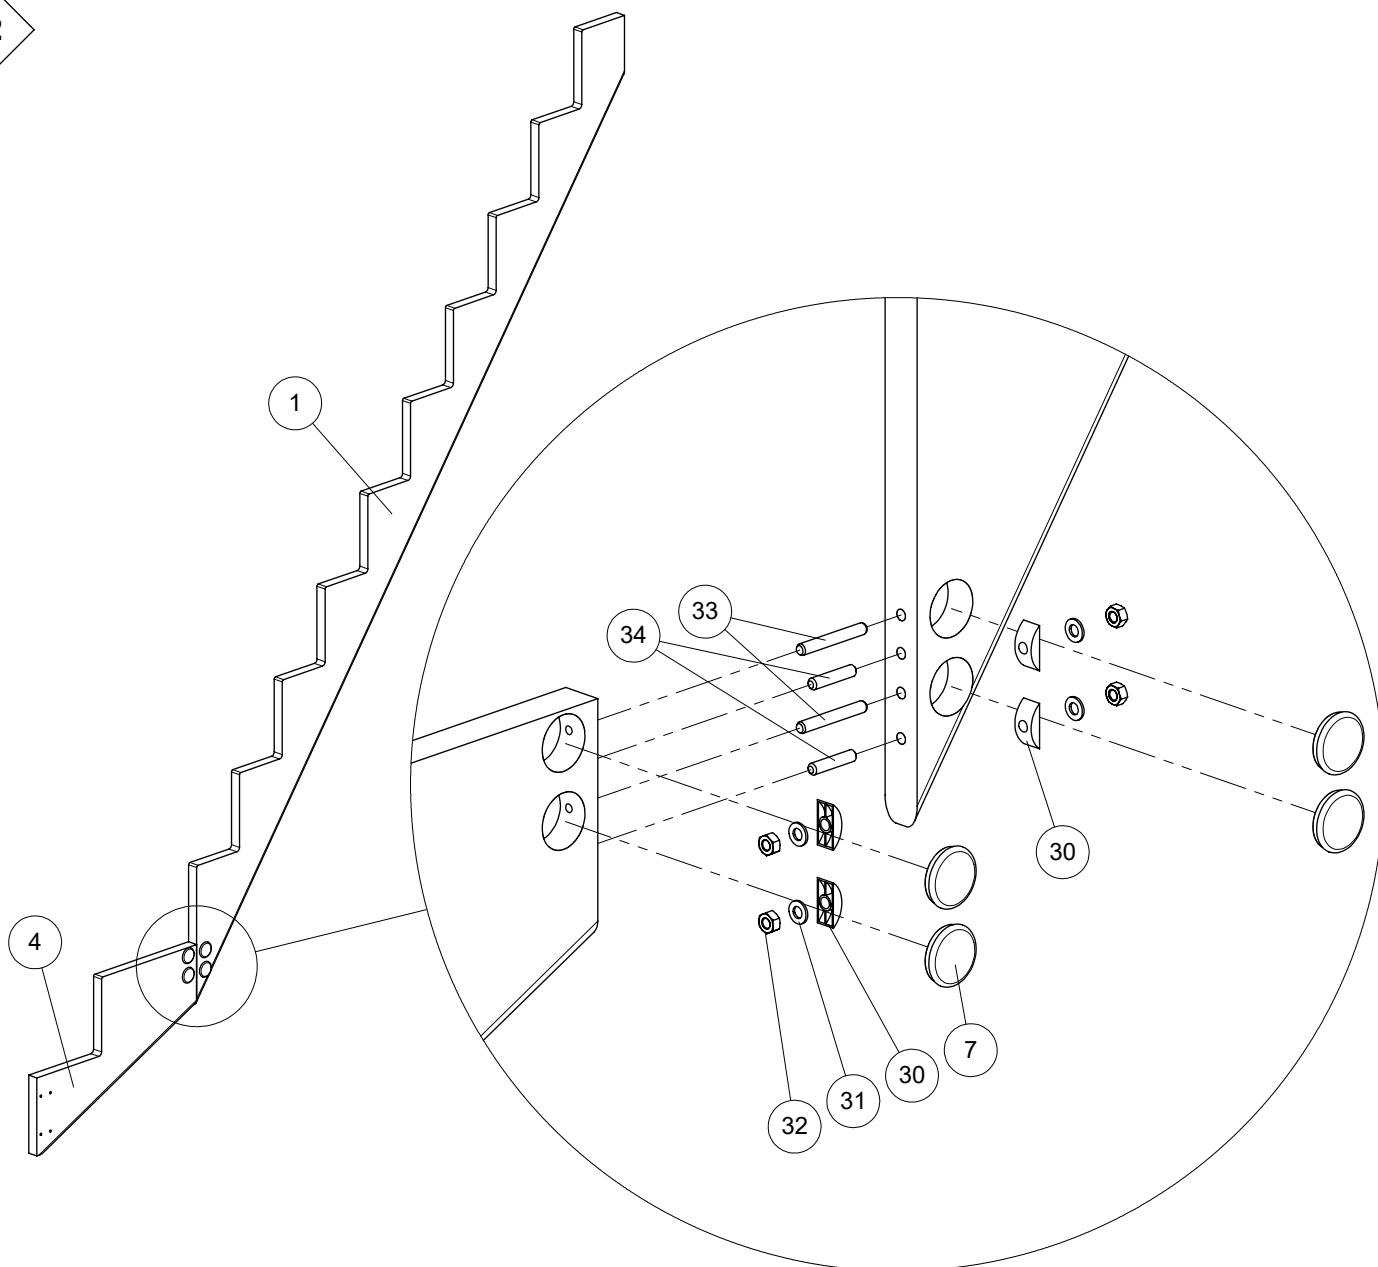


3

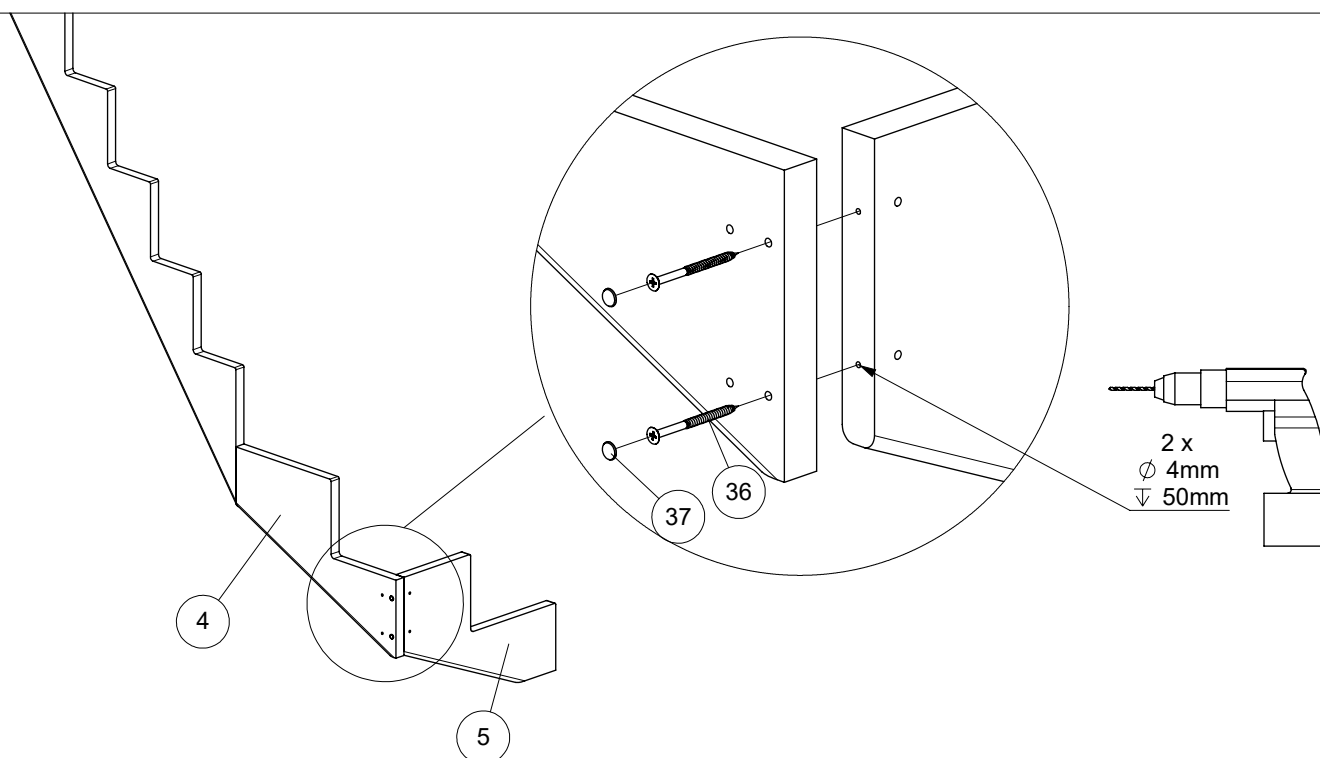

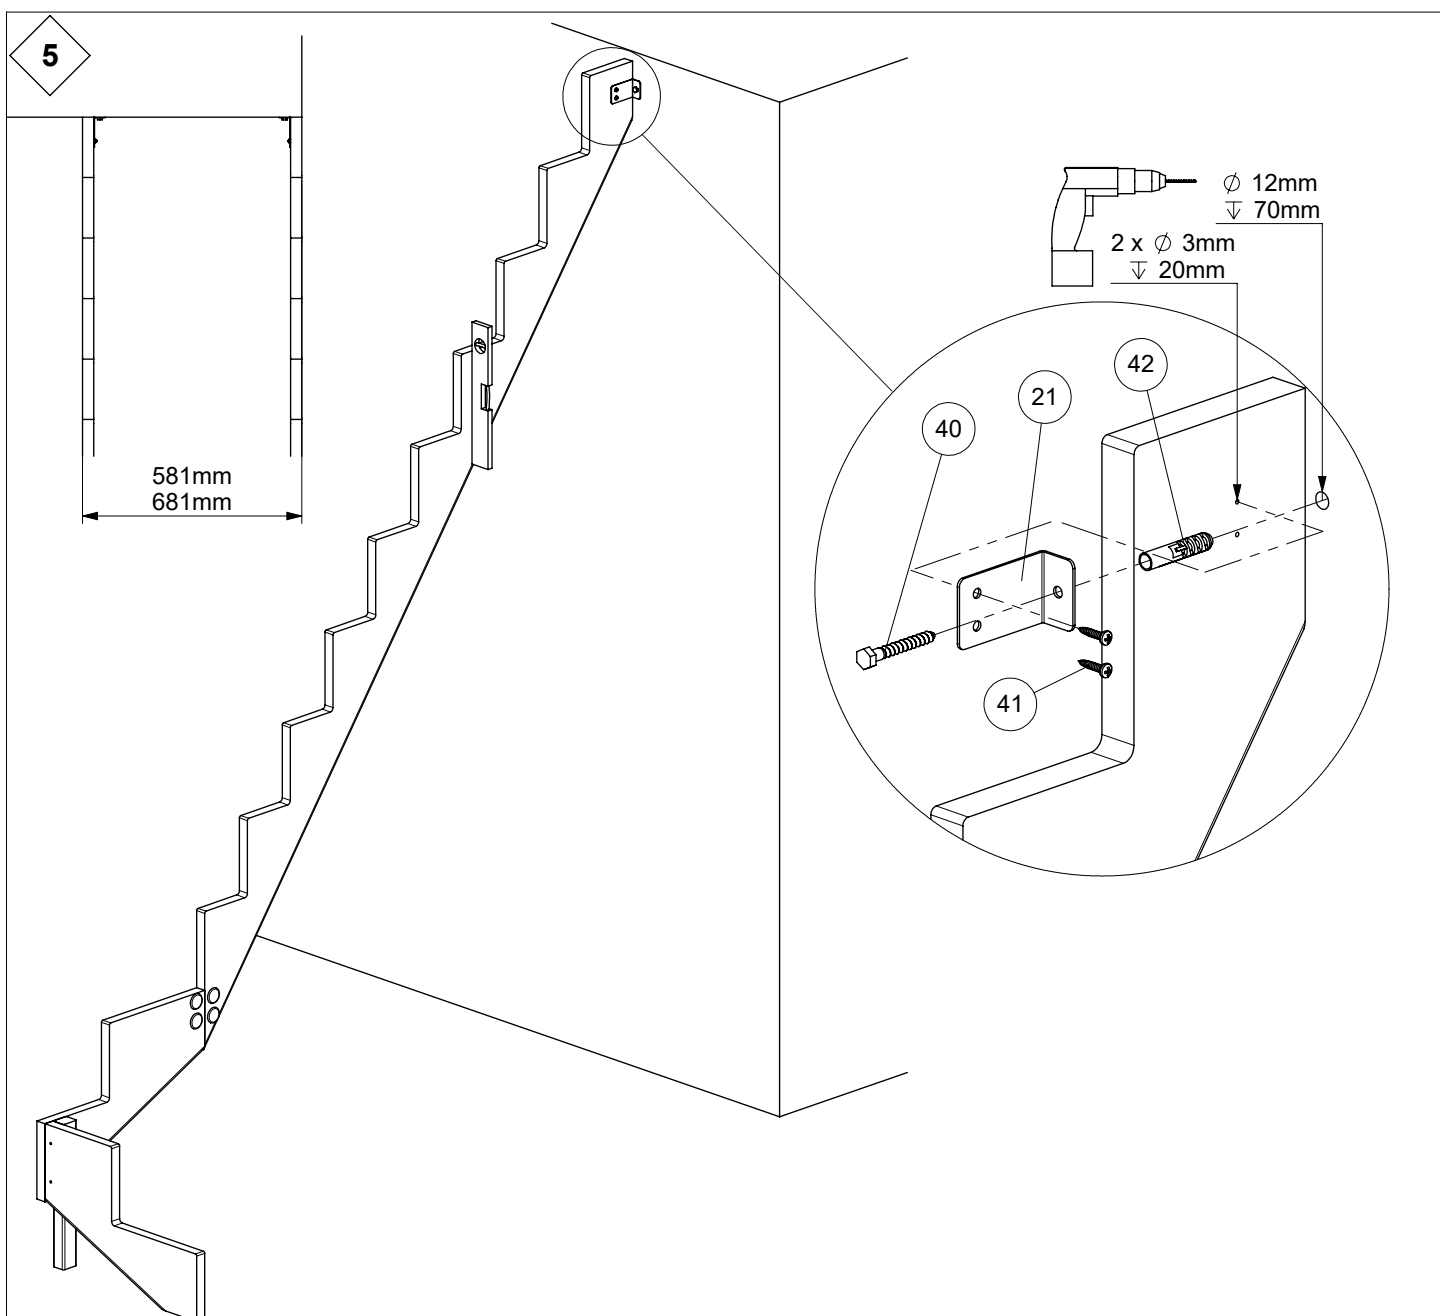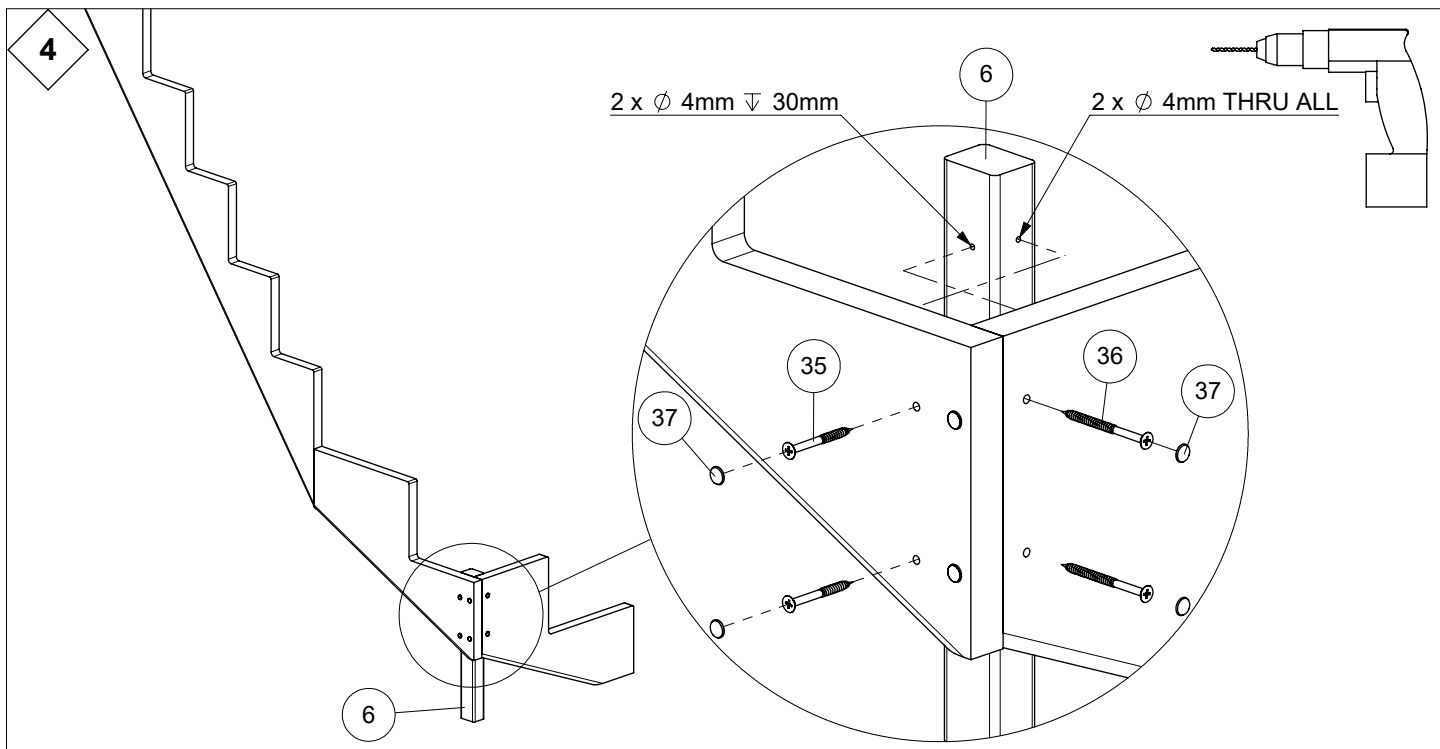


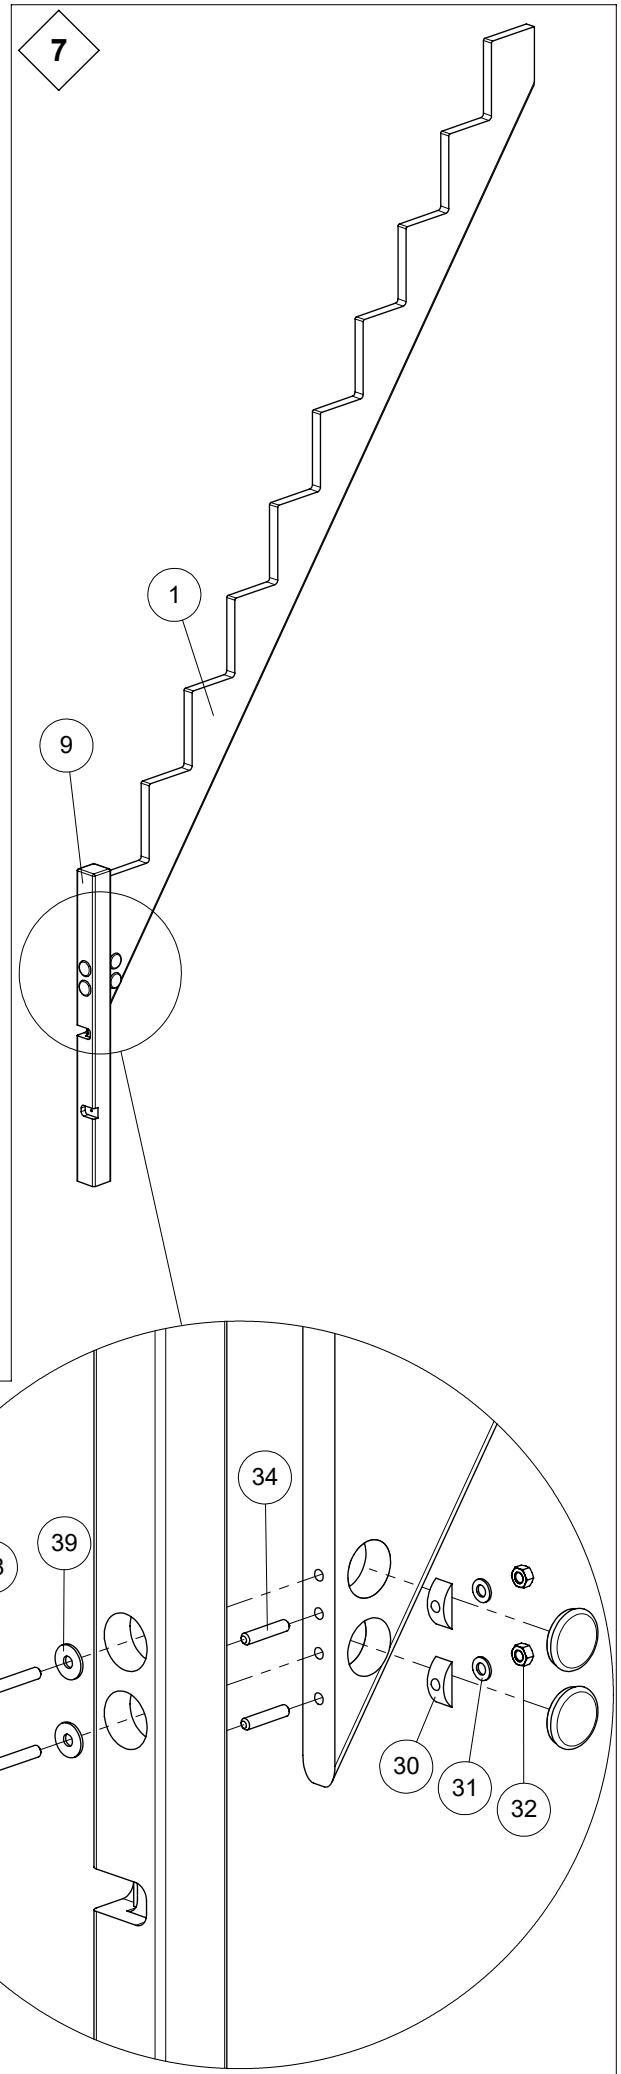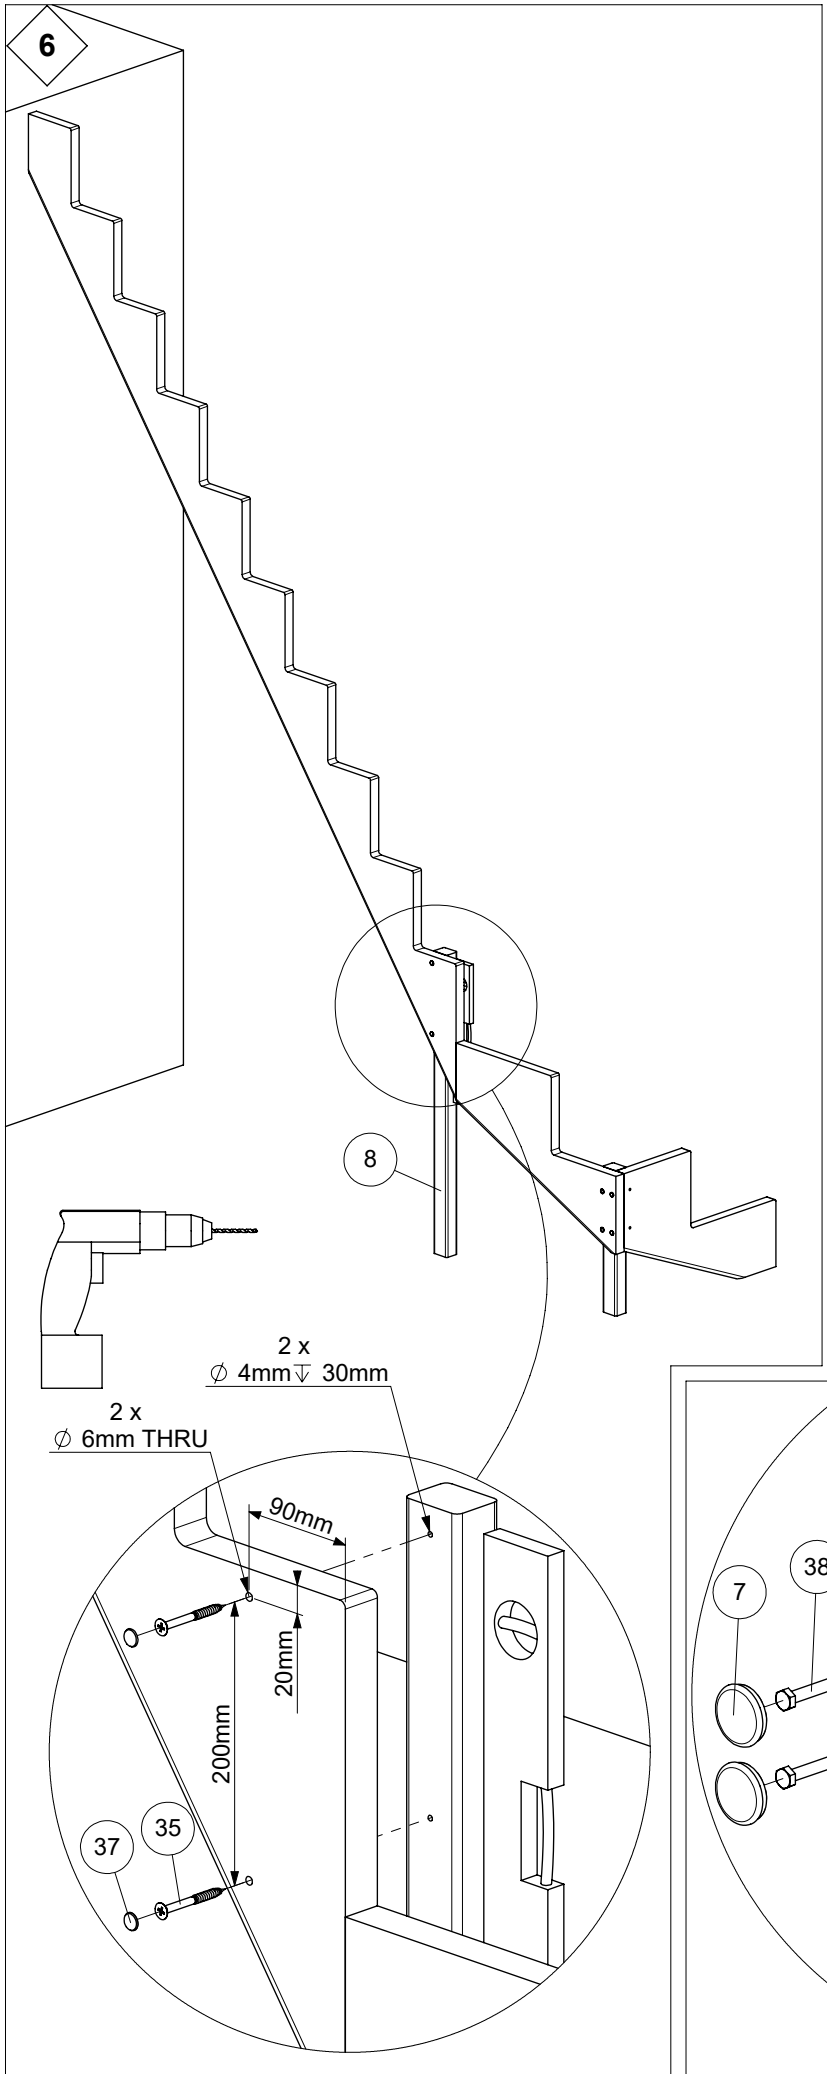


8

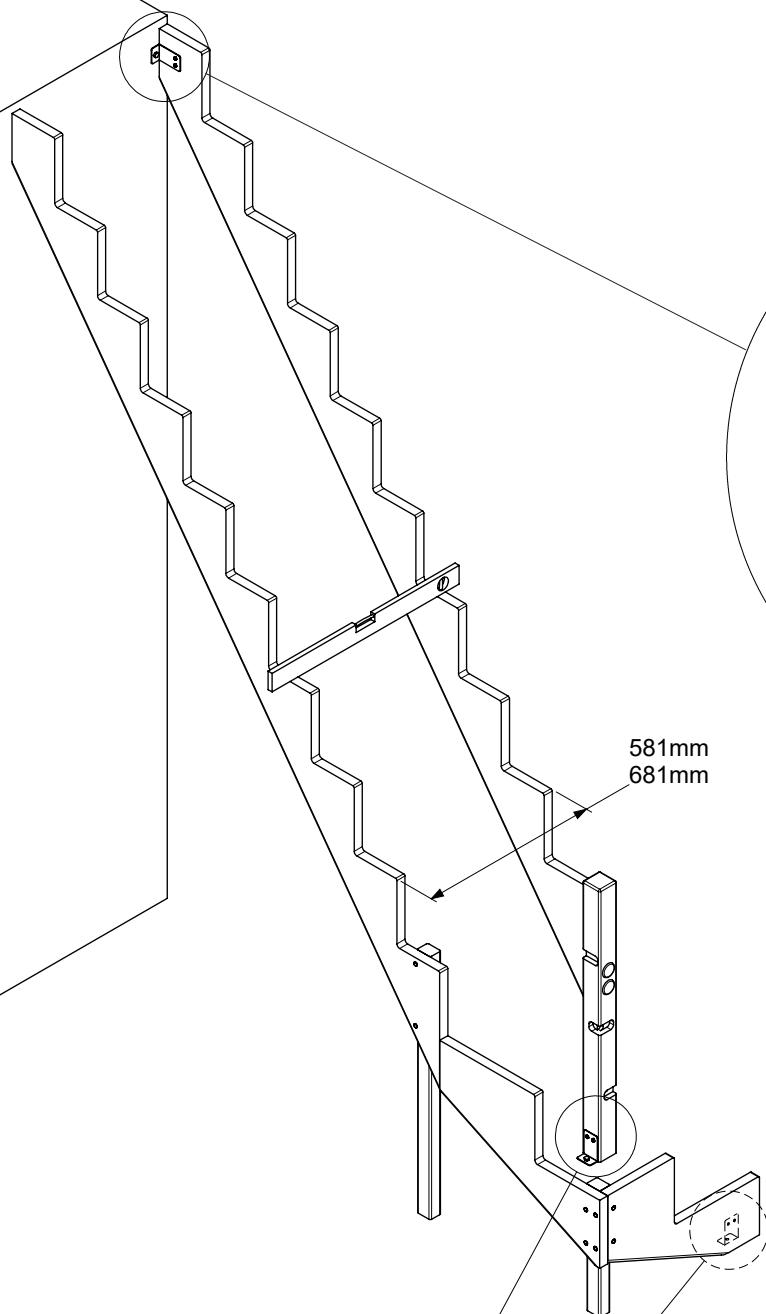

$\varnothing$ 12mm
▽ 70mm
2 x $\varnothing$ 3mm
▽ 20mm

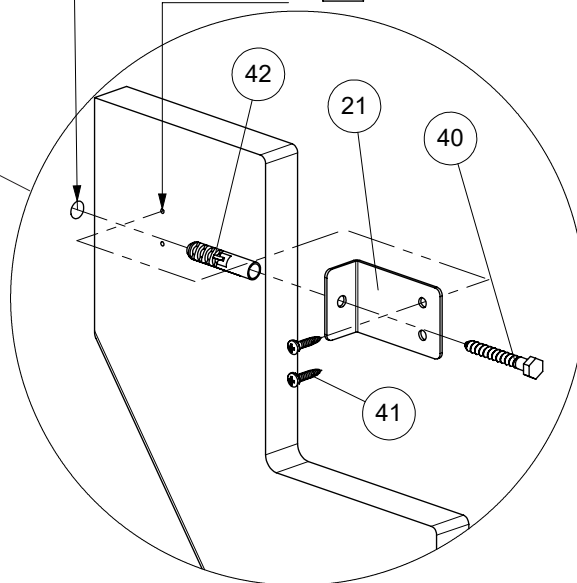


581mm
681mm

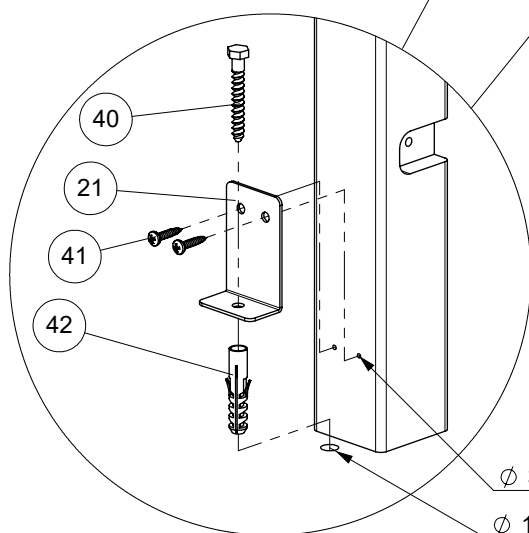



2 x
 $\varnothing$ 3mm ▽ 20mm
 $\varnothing$ 12mm ▽ 70mm




9



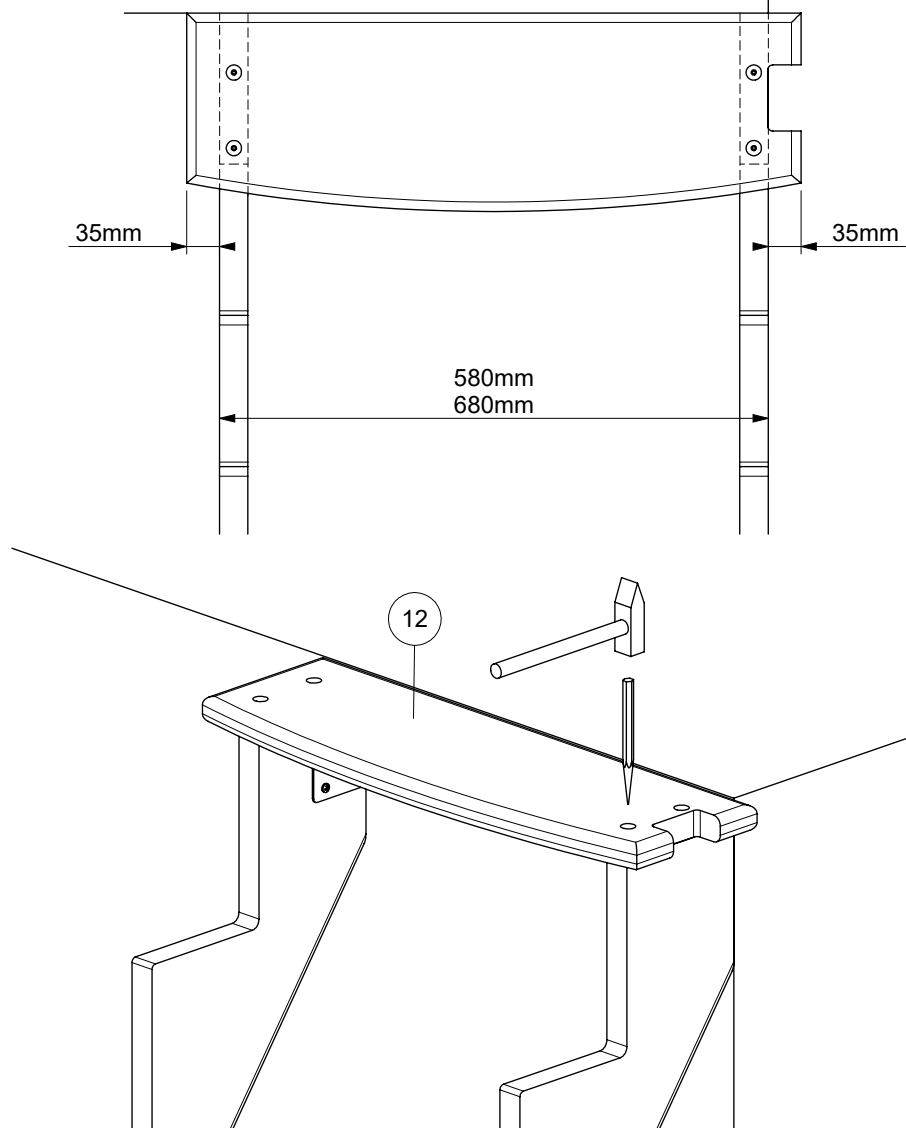



10

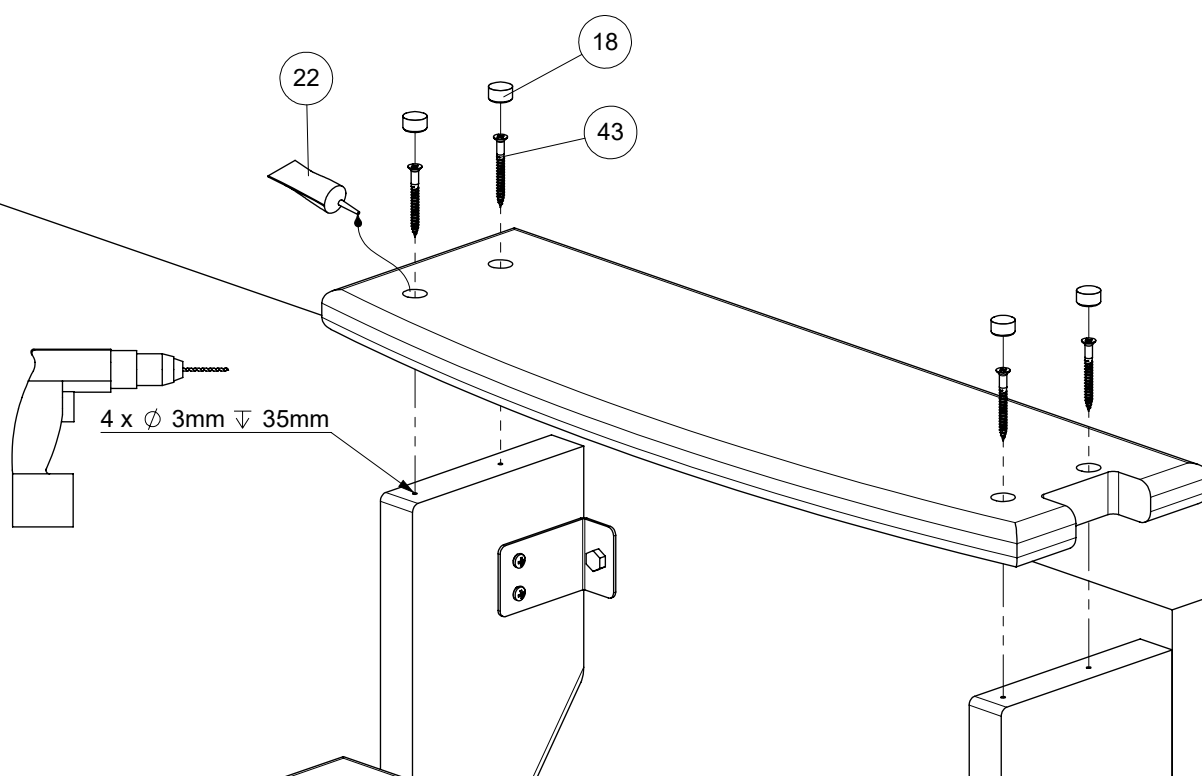

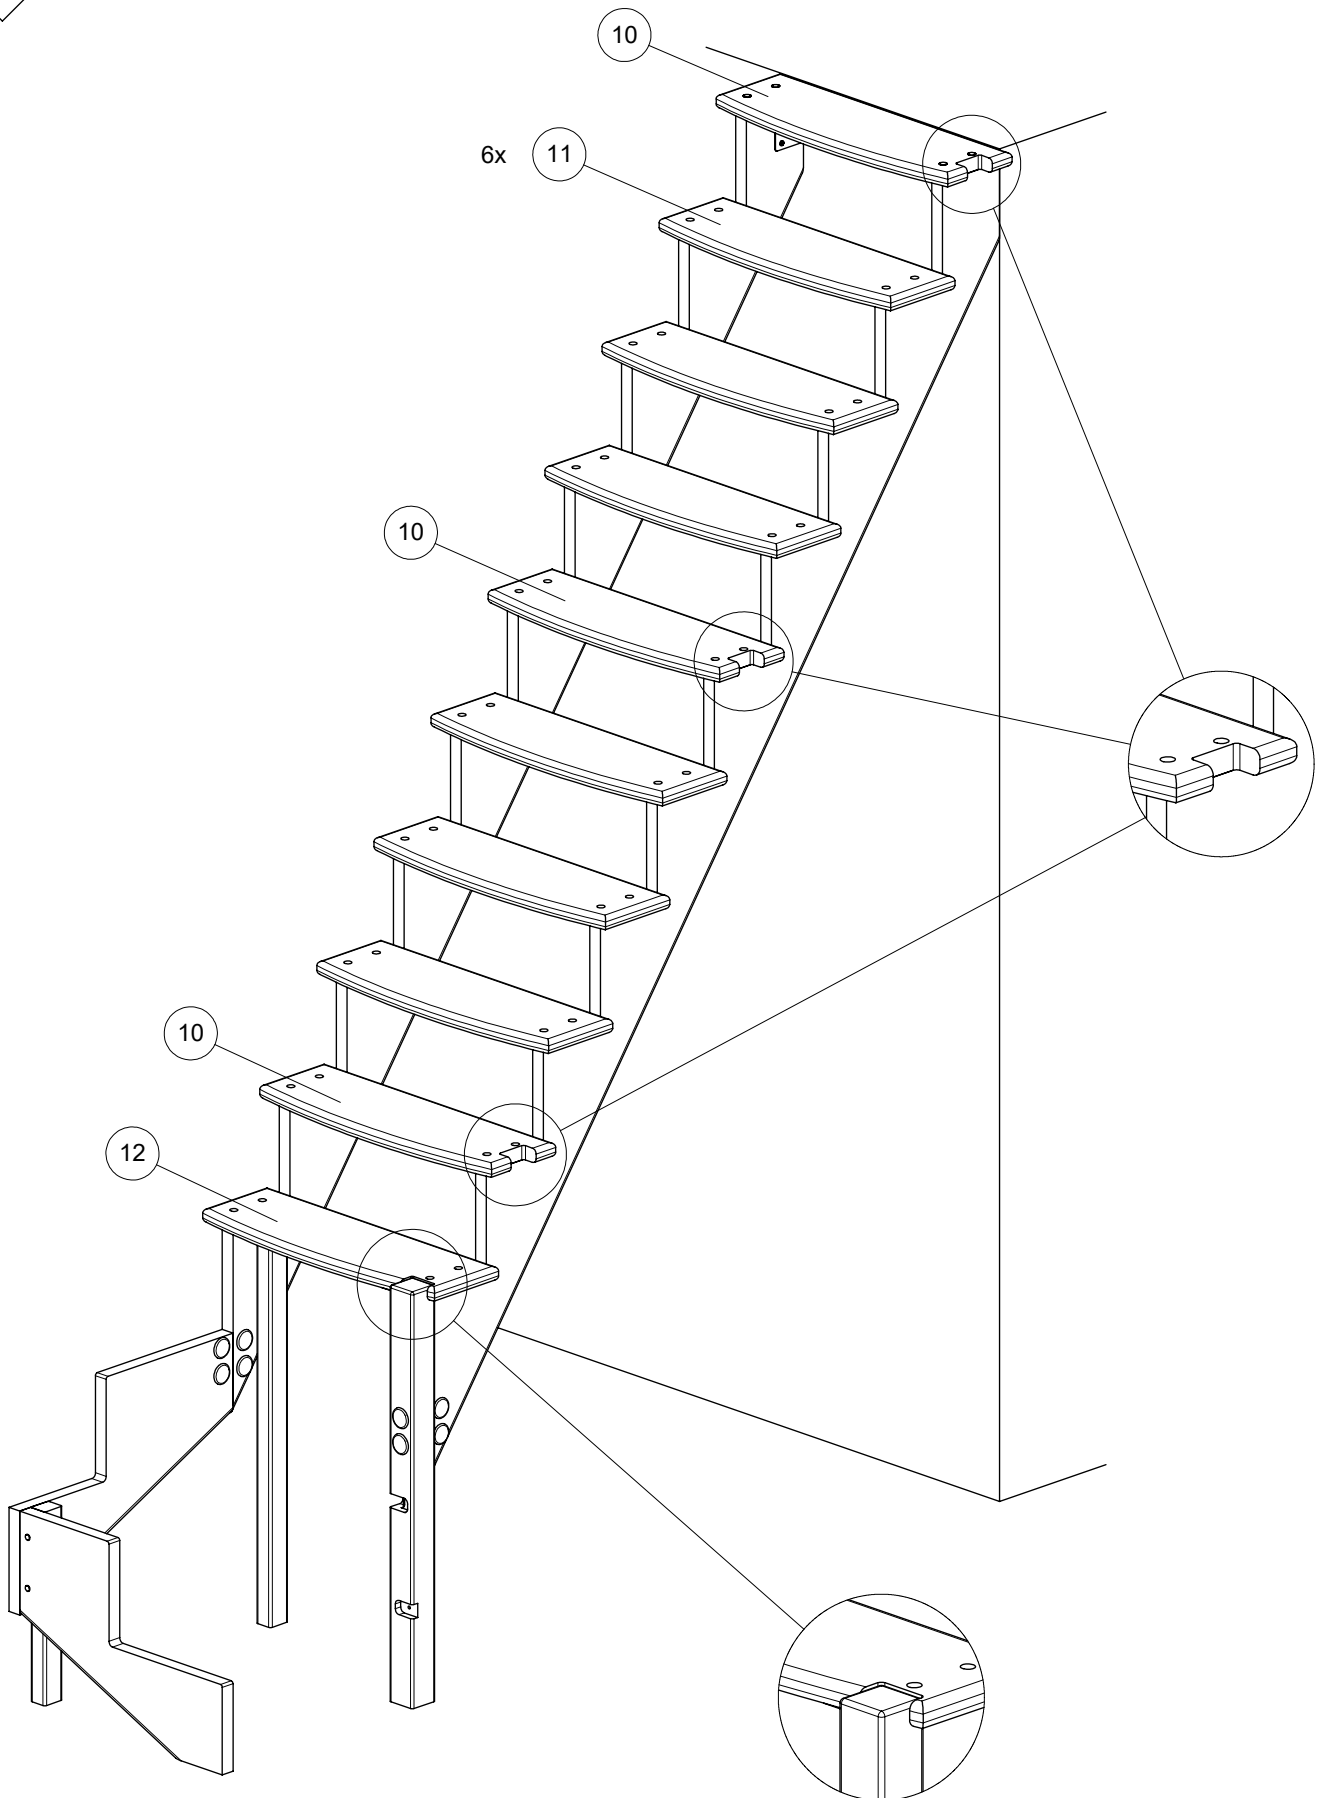


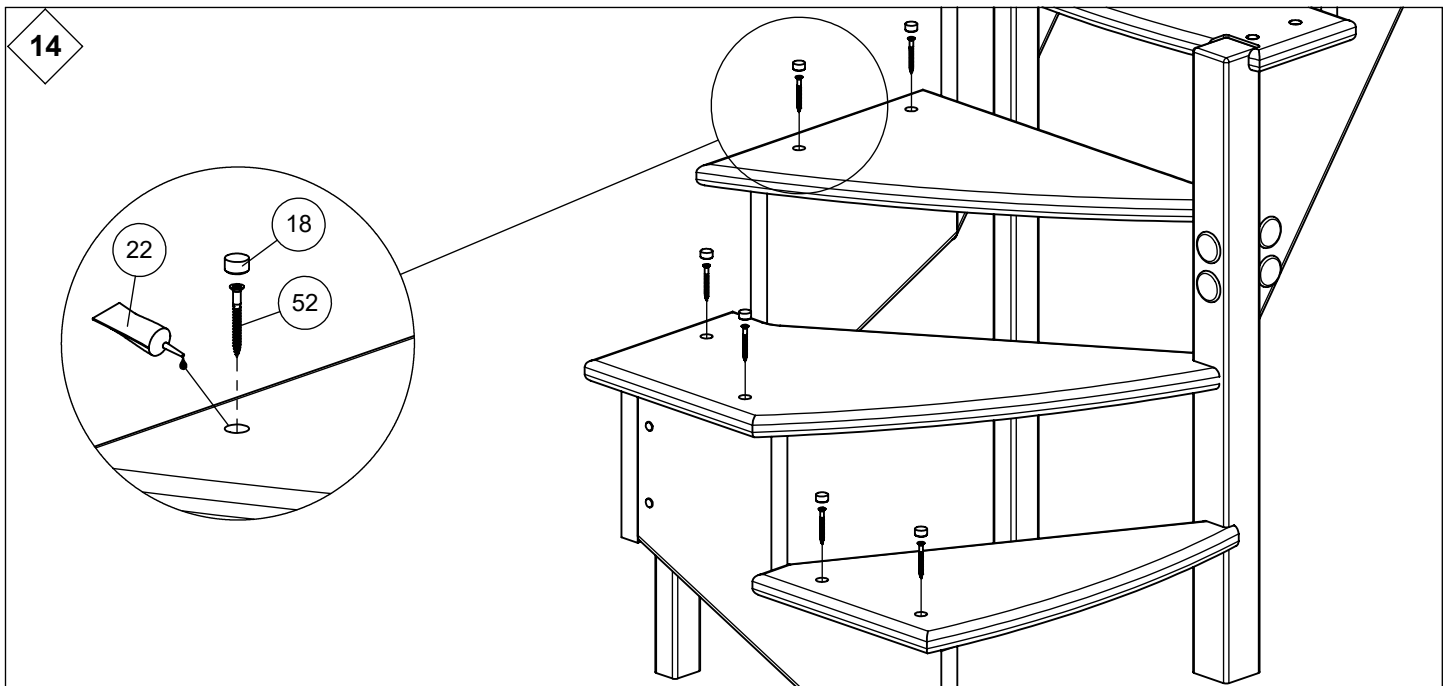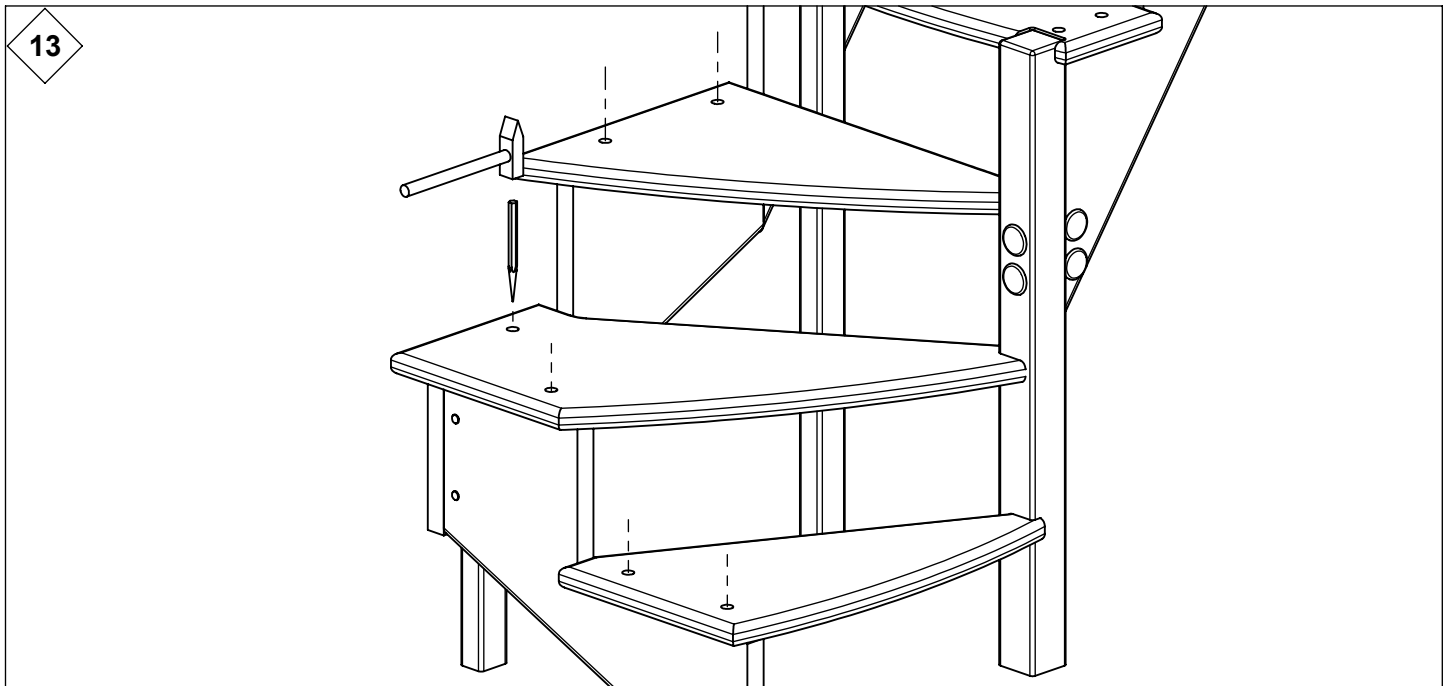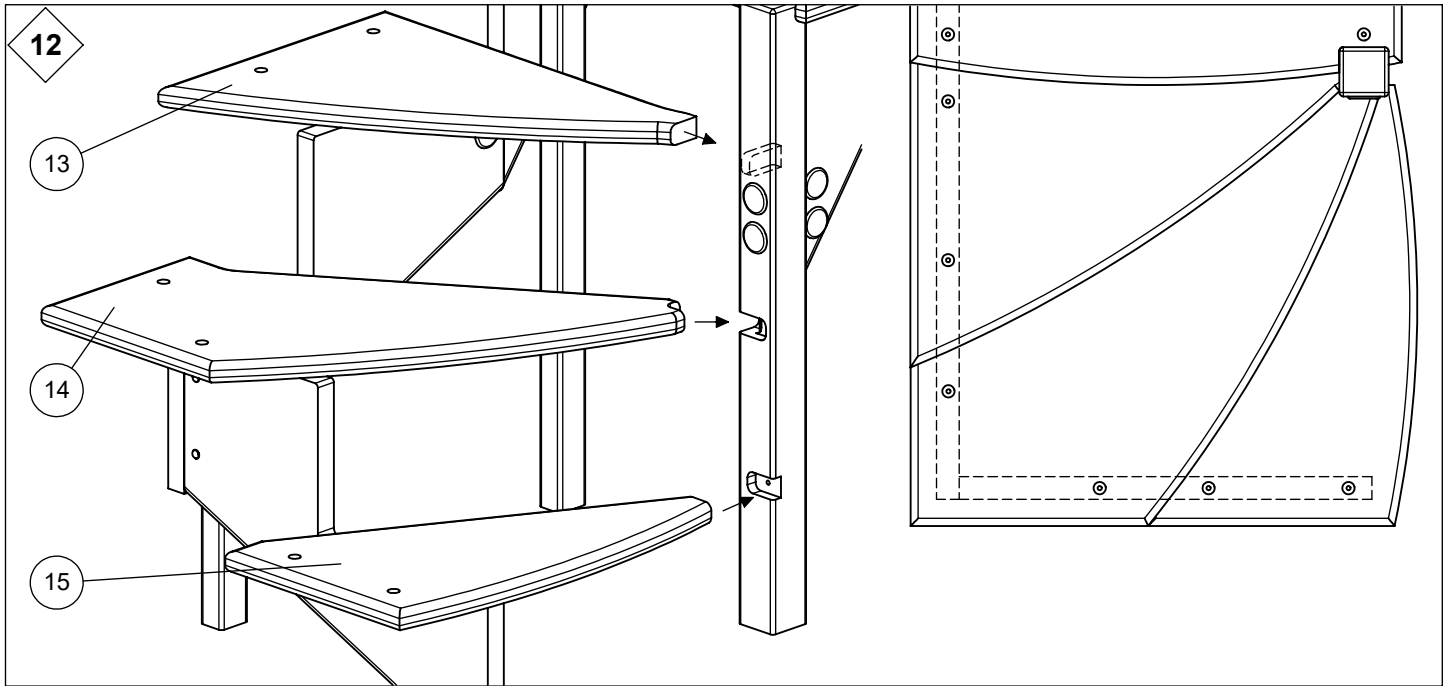

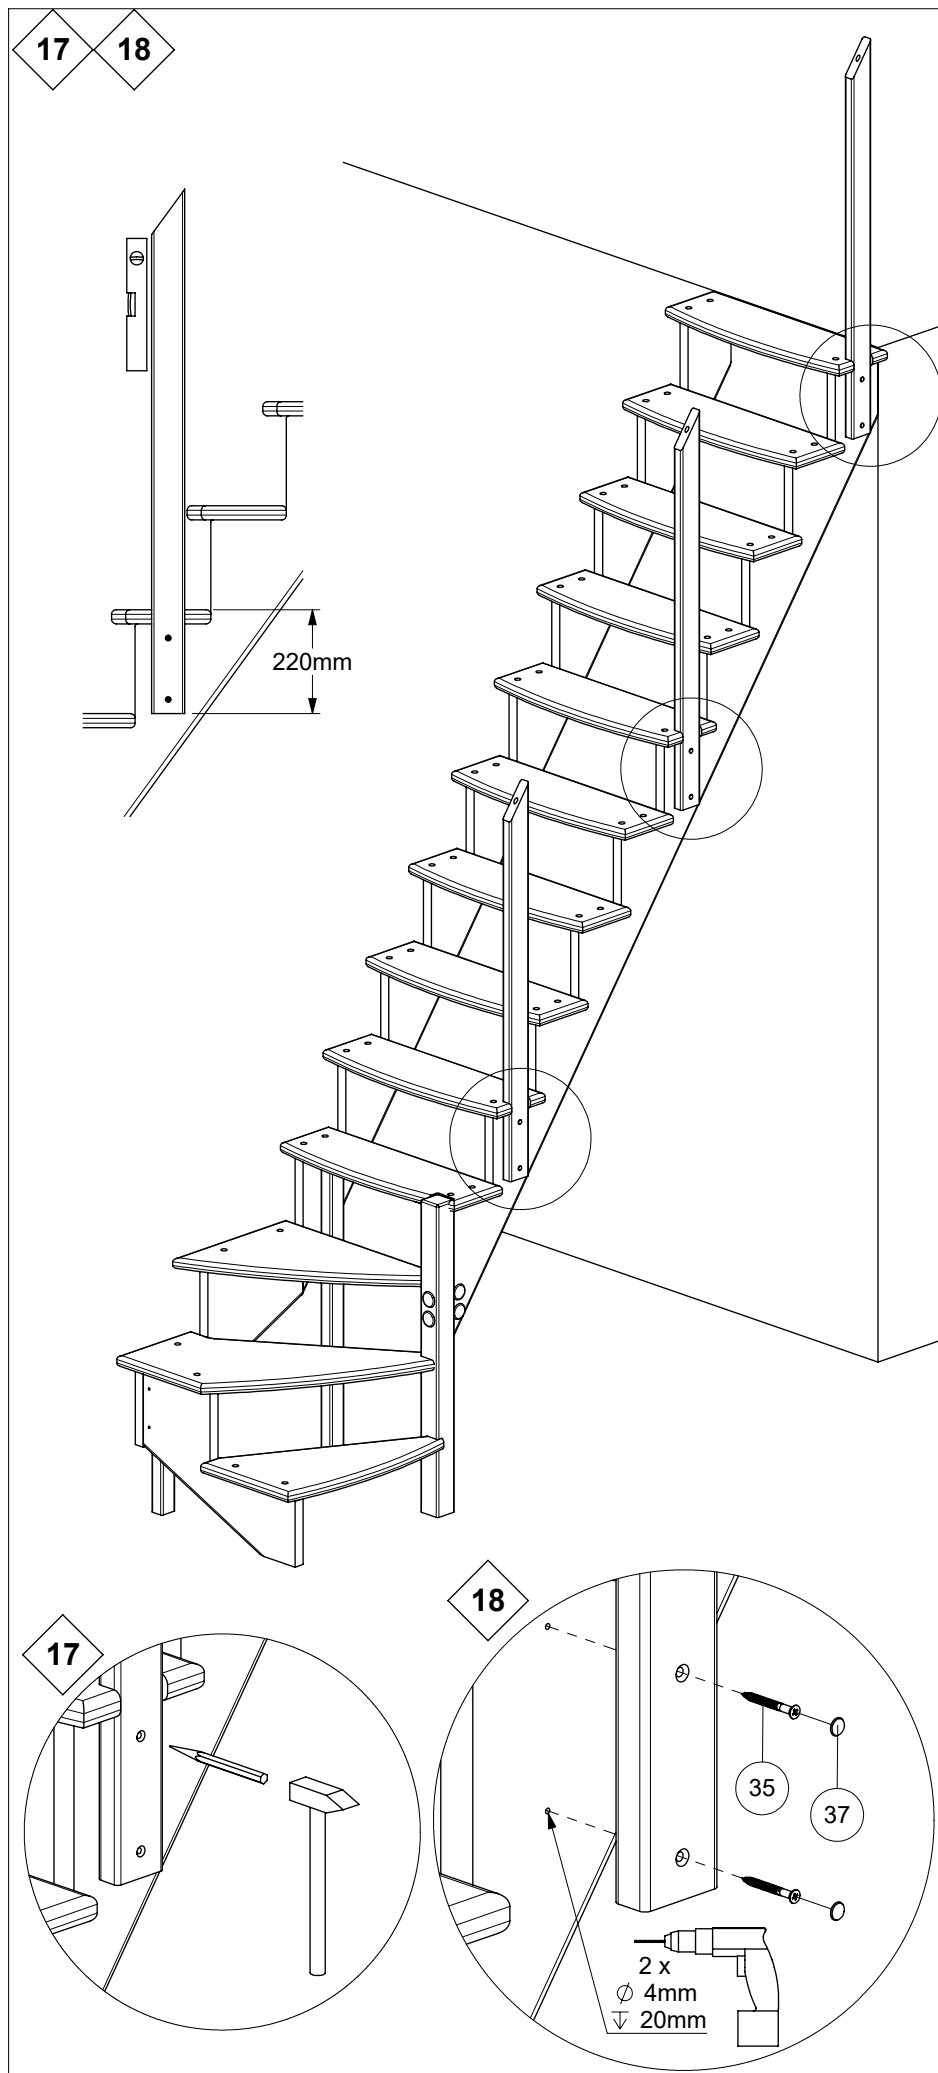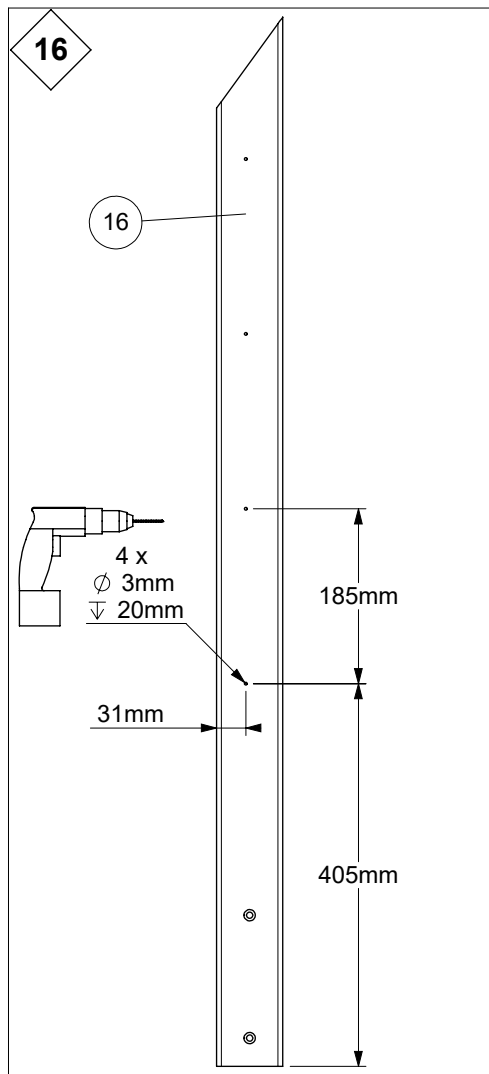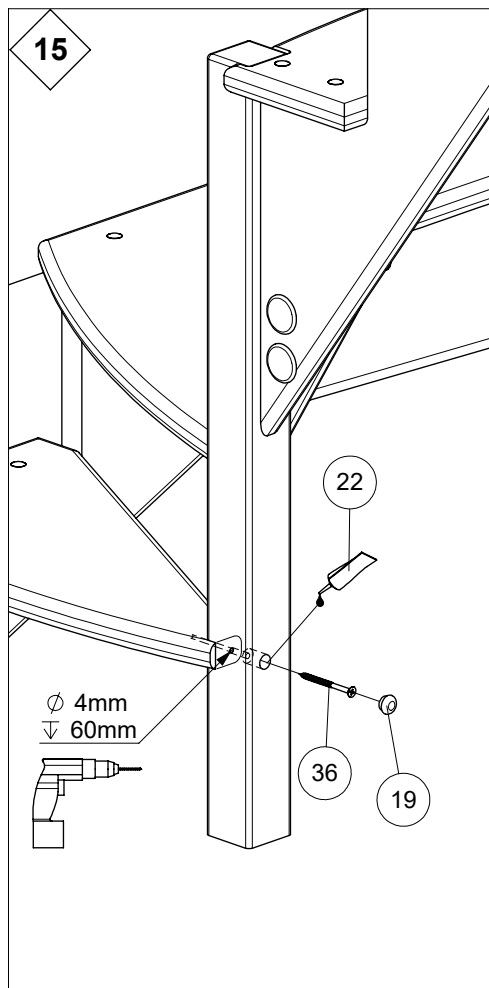

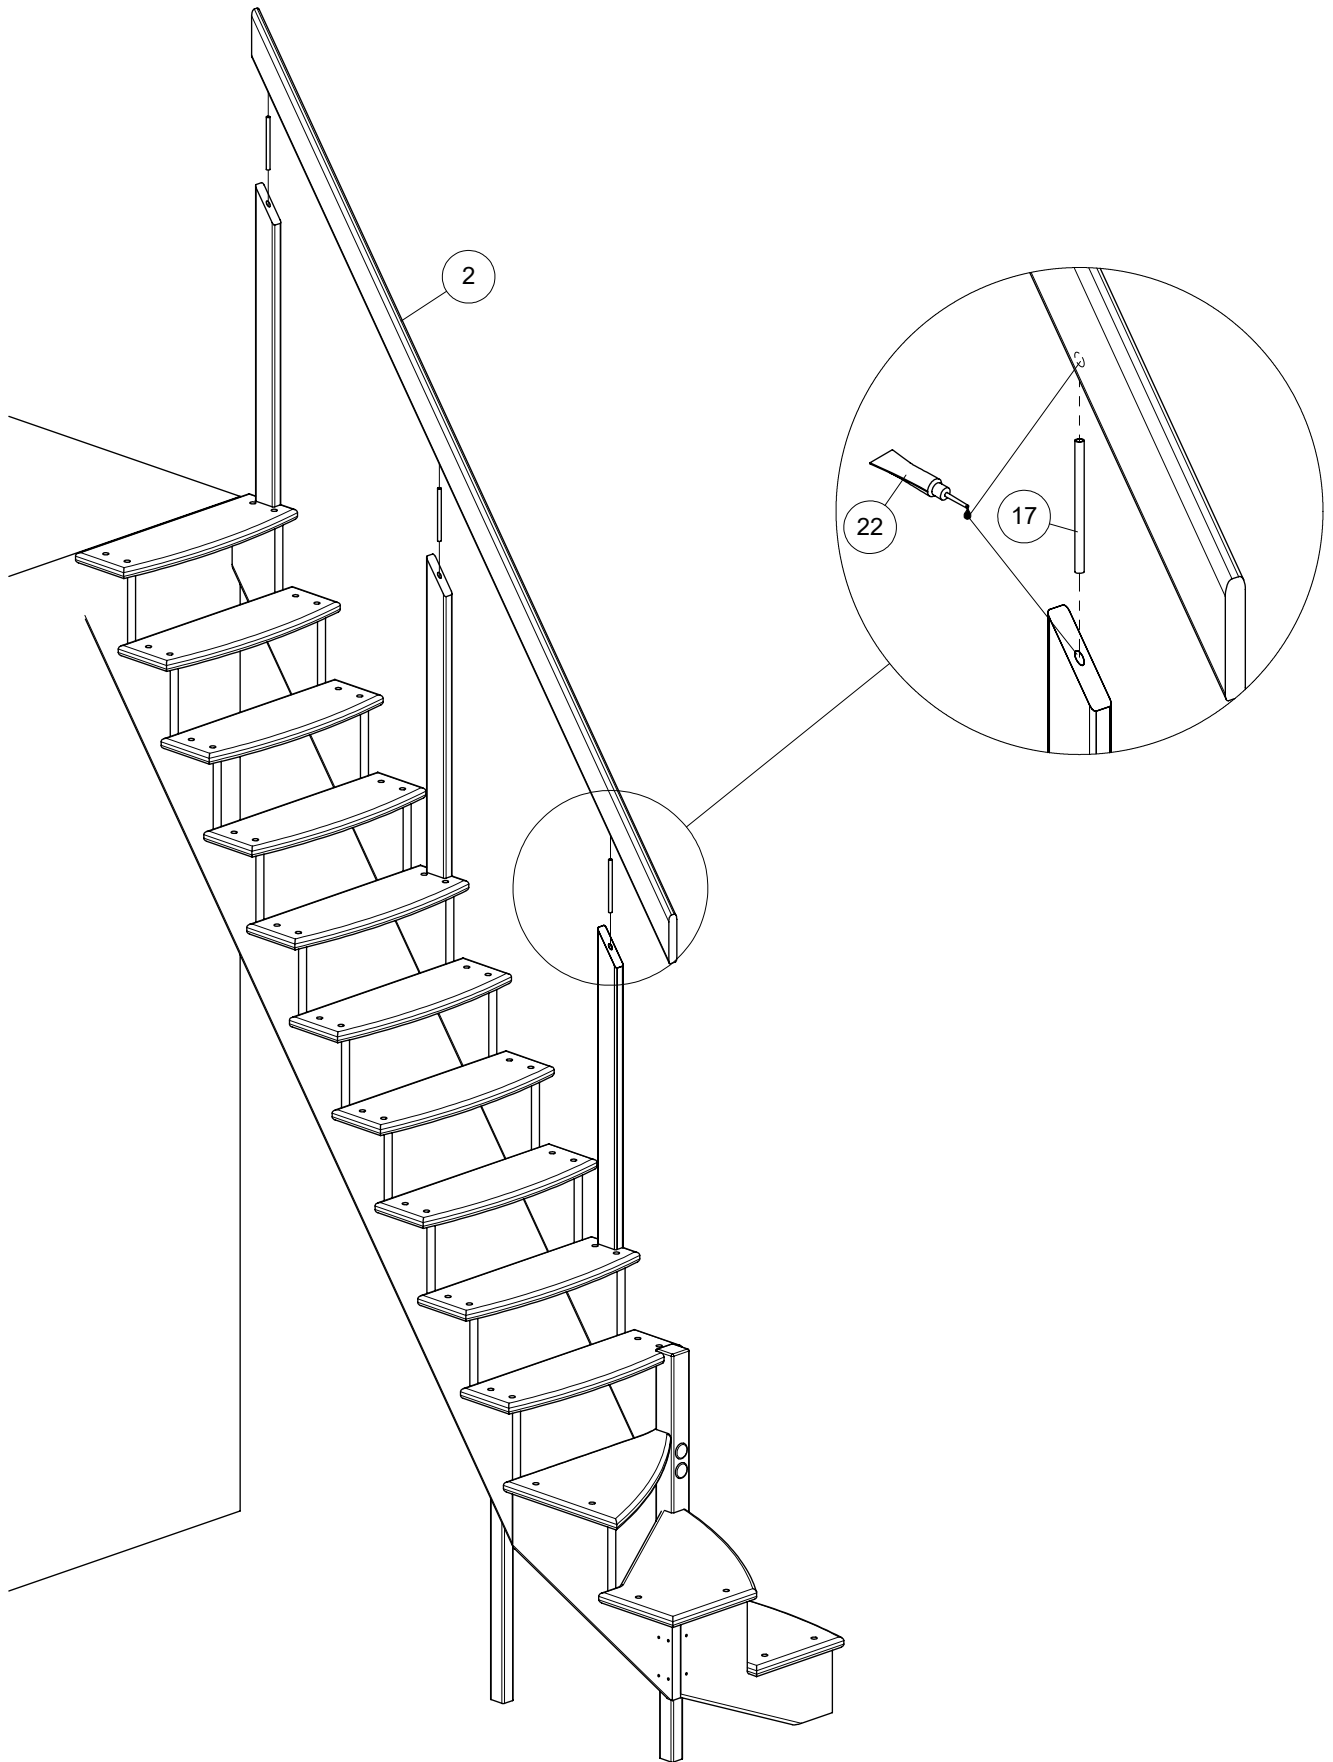

20

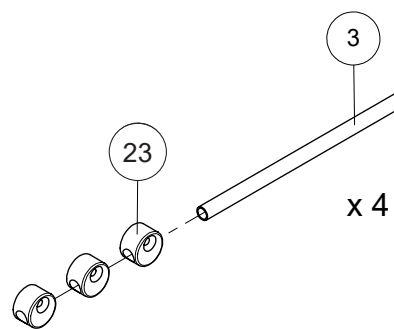

21

